 





FARMINGTON COMMUNITY LIBRARY

How Playaway Works

For models produced before July 1, 2007:



 
10 levels
of volume




3 levels of
voice speed



 
Bookmark your
favorite passages




Skip back
a chapter
or bookmark

 

Time remaining
in chapter

 


Skip ahead
a chapter or
bookmark

 

Rewind



 Press to power on.
Press again to play/pause.
Hold to power off.



Fast Forward

For models produced after July 1, 2007:

HOW TO PLAYAWAY - BUTTON FUNCTIONALITY

1 EQ/Equalizer:

Each press on the EQ button rotates a new EQ mode.

- NONE = No EQ setting
- LOUD = Overall sound is boosted
- BASS = Bass is boosted
- TREB = Treble is boosted
- CLEAR = High end sound is amplified
- HIFI = Sound is mixed for best performance

2 Power:

- a. Press the POWER button once to turn unit on
- b. Press the POWER button again and hold for 3 seconds to power off - release button after unit counts down and "OFF" appears on the LCD screen

3 Speed (Audiobook Content):

- a. Each press of the SP button rotates to a new speed mode. There are 3 options:
 - SPD = Normal
 - SPD+ = Fast
 - SPD++ = Fastest



Shuffle Play (Music Content):

 
- a. If your Playaway is pre-loaded with music content, the SP button enables/disables shuffle play functionality
- b. Pressing the SP button once will enable Shuffle Play mode and cause a randomization of playback

4 Volume Down:

- a. Each press of the Volume Down button will decrease the volume one level
- b. Press and HOLD Volume Down to accelerate volume decrease

5 LCD Screen:

- a. Displays the operating status of the Playaway
- b. Battery level indicated by icon
 -  = Full battery
 -  = Replace battery

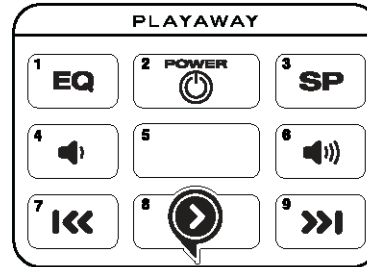



6 Volume Up:

- a. Each press of the Volume Up button will increase the volume one level.
- b. Press and HOLD Volume Up to accelerate volume increase

7 Reverse:

- a. Press the Reverse button once to reverse one chapter/track ("track" refers to music content)
- b. Press and hold the Reverse button to fast rewind

8 Play/Pause:

- a. Press the  button once to Play
- b. When in play mode, press the  button again to Pause playing or resume Play

9 Forward:

- a. Press the Forward button once to reverse one chapter/track ("track" refers to music content)
- b. Press and hold the Forward button to fast forward

CONSUMER INFORMATION

Need assistance?

Visit us online at www.playawaydigital.com.
Find answers and product information.

Or call us at (877) 883-0808.

➤ Please keep this card for reference